
DVD PLAYER



The DVD Player video output is connected to the lounge TV and plays through the TV stereo speakers or the deluxe sound rear radio speakers in the lounge area of the coach.

Set TV Sound Output


- Use the TV Menu button to set TV audio output to Variable Audio Output. (See TV owner's manual for instructions.) This will connect TV stereo sound output to the deluxe speakers in the lounge area.
- Volume is adjusted with the TV remote or volume button on the player.

Set TV Video Input


- Turn TV and DVD Player ON.
- Press the SOURCE button on the TV or TV remote to select "INPUT 1".
- The TV screen will display the DVD player logo when the correct input is selected.

Play DVD

- Insert DVD into player. DVD will begin to load automatically. TV screen will typically show "READING" or "LOADING".
- The DVD may load directly to the main title/menu screen or it may begin to play previews. You may be able to skip previews if desired by pressing the NEXT button until you see the main menu screen.

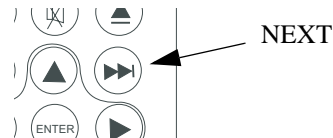

- When the main menu screen appears, use the arrow buttons on the DVD remote to select the desired entry or press the ENTER or PLAY buttons on the remote (or "Play" button on DVD player) to begin playing the feature.

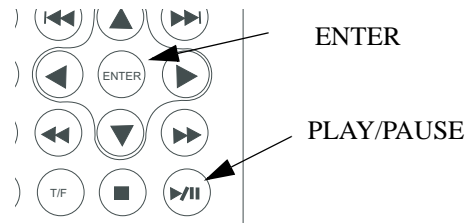

- Volume is adjusted with the DVD remote or volume button on the player.

Further Information

For complete operating instructions, refer to the manufacturer's information provided in your InfoCase.

Audio-Video System Basic Operation Guide

SIGHTSEER



NOTE: See your InfoCase for specific operating guides for audio and video components.



Part No. 161501-13-008
Rev. 1301120409
Copyright 2012 Winnebago Industries, Inc.
All rights reserved.